


MODEL F98 PUMP PARTS LIST

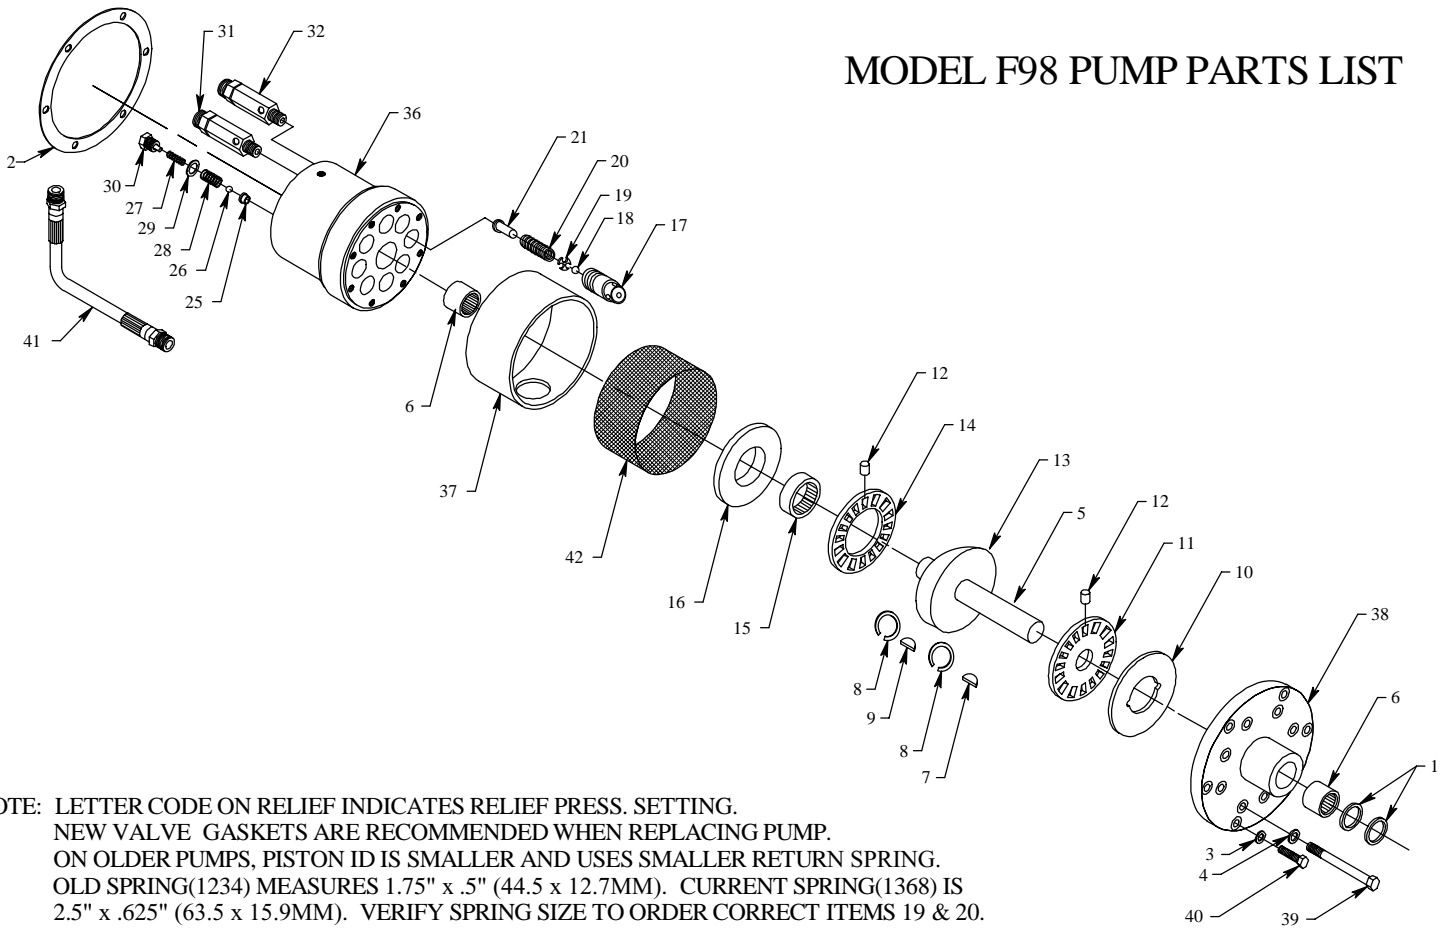

NO.	PART NO.	QTY.	PART DESCRIPTION	NO.	PART NO.	QTY.	PART DESCRIPTION
	1359		SEAL KIT		1361		PISTON KIT
1	1028	2	OIL SEAL	17	1367	8	PISTON
2	1012	1	PUMP GASKET	18	1168	8	BALL
3	1030	6	ALUMINUM WASHER	19	1366	8	BALL STOP (1233 old pumps see note)
4	1108	8	ALUMINUM WASHER	20	1368	8	SPRING(1233 old pumps see note)
	1358		SHAFT AND BEARING KIT	21	1369	8	SPRING PIVOT
5	1075	1	SHAFT		1354		EXHAUST VALVE KIT
6	1023	2	NEEDLE BEARING	25	1043	8	SEAT
7	1027	1	SHAFT KEY	26	1015	8	BALL
8	1118	2	SNAP RING	27	2264	8	EXHAUST SPRING
9	1117	1	WOBBLE KEY	28	1041	8	CAGE SPRING
	1360		THRUST BEARING KIT	29	1009	8	WASHER
10	1080	1	THRUST RACE	30	1008	8	PORT STUD
11	1077	1	FRONT ROLLER RETAINER				REMAINING PUMP PARTS
12	1119	32	THRUST ROLLER BEARING	31,32	1087	2	DUAL RELIEF VALVE (SPECIFY PUMP MODEL, SERIAL#, PRESS. & R.P.M.)
13	1131	1	WOBBLE PLATE	36	1240	1	PUMP CASTING (Not Sold Separately)
14	1078	1	REAR ROLLER RETAINER	37	1237	1	INTAKE HOUSING TUBE
15	1106	1	THRUST PLATE BEARING	38	1350	1	FRONT CASTING
16	1076	1	PISTON THRUST PLATE	39	1107	8	PUMP ASSEMBLY BOLT
				40	1035	6	MOUNTING CAP SCREW
				41	--		HOSE - SPECIFY RESERVOIR SIZE WHEN ORDERING
				42	1515	1	INTAKE SCREEN